

ELEMENTO TERMOSTÁTICO							ORIFICIO POTENCIA (KW)										
Código	Refrigerante	Servicio	Conexión			Tipo válvula	Código	CF03469	CF03470	CF03471	CF03472	CF03473	CF03474	CF03475	CF03476		
			Entrada	Salida	Compoensador		Orificio	0X	00	01	02	03	04	05	06		
CF03408	R134A	-10/45	Roscar	Roscar	INT	RFKH04											
CF03410				Soldar				0,69	1,07	1,67	1,95	3,35	4,83	6,26	7,81		
CF03409		-25/45		Roscar	EXT (R)												
CF03409				Roscar													
CF03411				Soldar	EXT (S)			0,61	0,80	1,14	1,30	2,22	3,22	4,17	5,16		
CF03421	R449A R448A	-10/45	Roscar	Roscar	INT	RFKH08											
CF03423				Soldar				0,93	1,72	3,15	3,88	7,00	10,57	13,27	16,65		
CF03422		-25/45		Roscar	EXT (R)												
CF03422				Roscar													
CF03424				Soldar	EXT (S)			0,76	1,21	1,94	2,38	4,30	6,43	8,09	10,12		
CF03461	R404A	-35/45	Roscar	Roscar	EXT (R)	RFKH03											
CF03463				Soldar	EXT (S)			0,50	0,71	1,03	1,20	2,05	2,96	3,82	4,70		
CF03400	R407C	-10/45	Roscar	Roscar	INT	RFKH02											
CF03402				Soldar				0,97	1,72	2,98	3,70	6,41	9,18	11,98	14,96		
CF03401		-25/45		Roscar	EXT (R)												
CF03401				Roscar					0,85	1,31	2,03	2,39	4,09	5,89	7,59	9,37	
CF03403				Soldar	EXT (S)												
CF03412	R410A	-10/45	Roscar	Roscar	INT	RFKH05											
CF03413				Roscar	EXT (R)			1,08	1,91	3,28	4,02	7,27	10,89	13,70	17,15		