

HRU-PremAIR

Function	Indication pattern
Binding mode is active (continuously green) ¹	
Pre-heater active (long flashes of green LED)	
Frost protection active (long flashes of green LED)	
Bypass active	
Timer mode active	
External sensor demand active (it has the highest demand)	
Internal RH mode active (it has the highest demand)	
Normal mode (green LED flashes)	
Exhaust fan error	
Supply fan error	
Both fans error	
Emergency temperature stop	
Exhaust temperature sensor fault	
Inlet temperature sensor fault	
Supply temperature sensor fault	
Outlet temperature sensor fault	
RH sensor fault	
Pressure sensor one	
Pressure sensor two	
Exhaust Modbus error	
Supply Modbus error	
General Modbus error	
NTC Flow Measurement T1 error	
NTC Flow Measurement T2 error	
Communication error with Multizoning Component	
Filter dirty	
Additional outdoor temperature sensor fault	

Table 1 – LED status light

1) When the button is pressed the binding mode is ended